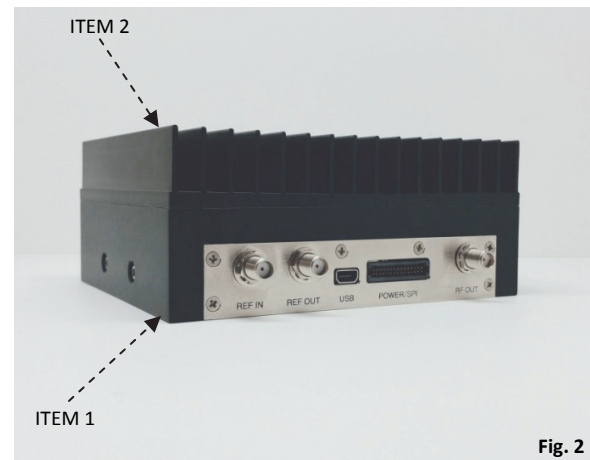


**ACCESSORY, QUICKSYN LITE HEATSINK KIT**
**MFSL-ACC10**

ITEM NO.	DESCRIPTION	NI MICROWAVE COMPONENT PN	QTY
1	PLATE, HEATSINK	5218595-01	1
2	HEATSINK	5218597-01	1
3	SCREW, 4-40 UNC X 3/8 LONG ALLEN HEAD	5150004-06	10
4	TOOL, BALL-END L-WRENCH, 3/32	5730008-00	1
5	PACKET, THERMAL PASTE	5730009-00	1


**Fig. 1**

**Fig. 2**
**ASSEMBLY INSTRUCTIONS:**

1. Remove serial-number label from top of the QuickSyn Lite module and re-attach it to the rear side of the QuickSyn Lite module as shown in Fig 1.
2. Mount the QuickSyn Lite module into the heatsink plate (Item 1). Insert 4 each 4-40 Allen head cap screws (two in both sides) and tighten with supplied Allen wrench (Item 4).
3. Apply the supplied packet of thermal paste (Item 5) onto the flat surface of the heatsink (Item 2) and with tissue (NOT SUPPLIED) smear paste uniformly on entire flat surface area.
4. Mount heatsink (Item 2) onto heatsink plate (Item 1). Insert 6 each 4-40 Allen head cap screws (Item 3) and tighten with Allen wrench (Item 4) to complete the assembly as shown in Fig 2.